

## URC2060 Big Button TV Remote Guide

This is a guide to help you program the URC2060 Big Button remote control to your TV and help you learn how to find and use its basic features.



### In This Guide:

- 1) Programming instructions for top 10 TV brands
- 2) Programming instructions for all TV brands
- 3) Autoprogramming instructions to search all known codes
- 4) Basic instructions for the buttons and features on the remote
- 5) Codes for all brands of TVs

## Programming Instructions for Top 10 Brands:



**Turn on the TV and follow the steps below to set up your remote for the most popular brands.**

Be sure to point the remote at your equipment during setup



1. Press and hold SETUP until the LED blinks twice

## Programming Instructions for Top 10 Brands (continued)



**2. Press the TV POWER key.**



**3. Find your TV brand in the charts below. Press and hold the corresponding digit key while aiming the remote at your TV.**

<b>Codes:</b>	<b>1 Insignia/Dynex</b>	<b>6 Samsung</b>
	<b>2 LG/Zenith</b>	<b>7 Sharp</b>
	<b>3 Mitsubishi</b>	<b>8 Sony</b>
	<b>4 Panasonic</b>	<b>9 Toshiba</b>
	<b>5 Philips/Magnavox</b>	<b>0 Vizio</b>



**4. Release the key when the TV turns off and setup is complete**

# Programming Instructions Using All Codes For Your TV:



**Turn on your TV and follow the steps below to set up your remote.**

Be sure to point the remote at your TV during setup



**1. Press the TV POWER key.**



**2. Press and hold SETUP until the LED blinks twice**



**3. Using the digit keys on the remote, enter the first code shown in the code list at the end of this guide.**



**4. Test the remote to confirm that it controls your TV as expected. If it does not, try again using the next code listed.**

## “Autoprogram” Instructions To Search For Correct Code:



**Turn on the TV and follow the steps below to search through all codes.**

Be sure to point the remote at your TV during setup



**1. Press and hold SETUP until the LED blinks twice**



**2. Press the TV POWER key.**



**3. Aim the remote at your TV and press and hold down the OK key.**



**4. Release the key when the TV turns off and setup is complete**

# Quick Guide to Buttons on the Remote

## POWERSETUP KEYS

- \* TV POWER turns your TV on and off
- \* CBL POWER turns your cable box on and off
- \* SETUP used for remote control programming

## PLAYBACK CONTROLS

- \* FF/PAUSE/PLAY/REW/STOP used to control playback of live, recorded, or On Demand programs
- \* RECORD press to record selected program

## NAVIGATION KEYS

- \* GUIDE displays program guide
- \* MENU displays main cable menu
- \* INFO displays information on current selected program
- \* EXIT closes current menu
- \* FAV cycles through favorite channels set on your cable box
- \* A-D KEYS used for special functions displayed on your cable menus
- \* ON DEMAND used to access on demand program library

## OTHER KEYS

- \* LAST returns to the previously selected channel
- \* INPUT cycles through video inputs on the TV or Audio Device
- \* HELP displays the HELP menu screen for your cable box



A COMPLETE LIST OF TV CODES ARE ON THE NEXT/LAST PAGE. IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CONTACT 1-844-507-9000



Admiral	0093, 0463
Advent	0761, 0817
Aiko	0092
Aiwa	1362
Akai	0812, 1675, 0765, 0030, 0672, 1207, 1385, 1688, 1935, 2232
Alfide	0672
America Action	0180
Anam	0180
AOC	0030, 1089, 1365, 1589, 1590, 2014, 2087
Aomni	1623
Apex Digital	0748, 0879, 0765, 0890, 1217, 1991, 2397
Astar	1531, 1738
Audinac	0180
Audiovox	1564, 0451, 0180, 0092, 0802, 1284, 1769, 1865, 1937, 1951, 2513
Aventura	0171
Axion	1937
Barco	0556
Baysonic	0180
Bell & Howell	0154
BenQ	1032, 1315
Blue Sky	0556, 2153
Boigle	1696
Bradford	0180
Broksonic	0236, 0463, 1935, 1938
Byd-sign	1309
Candle	0030
Carnivale	0030
Carver	0054
Celebrity	0000
Celera	0765
Champion	1362
Changhong	0765
Cineral	0451, 0092
Citizen	0060, 0030, 0092, 1669, 1672, 1935
Clarion	0180
Coby	1634, 2306, 2314, 2315, 2338, 2340, 2344, 2345, 2347, 2348, 2351, 2560
Commercial Solutions	0047
Contec	0180
Continental	2357
Coradir	2844
Craig	0180
Crosley	0000, 0054
Crown	0180, 0672
Crown Mustang	0672
Curtis	1200, 1326, 2352, 2466
Curtis Mathes	0047, 0054, 0154, 0451, 0093, 0060, 0030, 0145, 0166, 1661
CXC	0180
Cytron	1326
Daewo	0154, 0451, 0092, 1661, 0661, 0672
Dell	1264, 1080
Denon	0145
Diamond Vision	1996, 1997
Digistar	1565
Digital Lifestyles	1765
Disney	1665
Dumont	0017
Durabrand	0463, 0180, 0178, 0171, 1034, 1665
Dynex	1785
Electroband	0000

Electrograph	1755, 1623
Electrohome	0463, 1670, 1672
Elektra	0017, 1661
Element	1687, 2183
Emerson	1864, 0154, 0451, 0236, 0463, 0180, 0178, 0171, 1661, 1665, 1963, 1997
Emprex	1422, 1765
Envision	0030, 0813, 1365, 1589, 2014, 2087
Epson	1122
ESA	0812, 0171, 1963
Fisher	0154, 1362
Fluid	2964
Fujitsu	0809, 0683, 0853
Funai	0000, 0180, 0171, 1963
Futuretech	0180
Gateway	1755, 1756
GE	0047, 0051, 0451, 0765, 0178
GFM	1864, 0171, 1665, 1963
Gibraltar	0017, 0030
Go Video	0886, 1823
GoldStar	0178, 0030
Gradiente	0053, 0392
Grundig	0672, 0683
Grunpy	0180
Haier	1034, 1749, 2494
Hallmark	0178
Hanns.G	1783
Hannspree	1348, 1745, 1783
Harman/Kardon	0054
Harvard	0180
Havermy	0093
Helios	0865
Hello Kitty	0451
Hewlett Packard	1494, 1088, 1089
Himitsu	0180
Hisense	0748, 1314, 1660, 2098, 2355
Hitachi	0145, 0797, 1345, 2215, 2433
HP	1494, 1088, 1089
Hyundai	0849, 1219, 1294
I-Fnc	1746
iLo	1286, 1603, 1665, 1684, 1990
Infinity	0054
Initial	1603, 1990
Insignia	1564, 0463, 0171, 1326, 1385, 1517, 1660, 1785, 1963, 2417
Inteq	0017
IRT	0451, 1661
IX	0877
JBL	0054
JCB	0000
JCM	2256
Jensen	0761, 0817, 1299, 1326
JVC	0463, 0053, 0731
KDS	1687
KEC	0180
Ken Brown	1321
Kenwood	0030
Kioto	0054, 0706, 0556
KLH	0765, 1962
Konka	1385
Kost	1262
KTV	0180, 0030
LG	0017, 0178, 0030, 0856
LiteOn	1088
LXI	0047, 0054, 0154, 0156, 0178
M&S	0054, 0236
MAG	1687

Magnavox	1755, 0054, 0051, 0030, 0171, 0706, 0802, 1198, 1365, 1525, 1867, 1963, 1990
Marantz	0054, 0030, 1398
Matsushita	0250
Maxent	1755, 1211, 1757
Megatron	0178, 0145
Memorex	0154, 0463, 0150, 0178, 0877, 1665, 1670, 1785, 1938
MGA	0150, 0178, 0030
Midland	0047, 0017, 0051
Mintek	1603, 1990
Mitsubishi	1250, 0093, 0150, 0178
Motorola	0093
MTC	0060, 0030
Multitech	0180
NAD	0156, 0178
Naxa	2104
NEC	0030, 1398
NetTV	1755
Nexus Electronics	2183
Nikko	0178, 0030, 0092
Nimbro	2104
Noblex	0154, 0430
Norcent	0748, 0824, 1089, 1365, 1589, 1590, 1745
Norwood Micro	1286
NTC	0092
NuVision	1657
Olevia	1610, 1144, 1240
Onwa	0180
Optimus	0250, 0154, 0166
Optoma	1348
Optonica	0093
Orion	0236, 0463, 1938
Panasonic	0250, 0051
PARK	2104
Penney	0047, 0156, 0051, 0060, 0178, 0030
Petters	1523
Philco	0054, 0463, 0030, 0145, 0171, 1661, 1665, 1963
Philips	0054, 0171, 0556, 1867, 1961
Pilot	0030
Pioneer	0166, 1398
Planar	1589
Polaroid	1523, 0765, 2120, 2117, 2063, 1991, 1962, 1769, 1767, 1762, 1687, 1565, 1385, 1327, 1326, 1316, 1314, 1286, 1276, 1262, 0865
Portland	0451, 0092, 1661
Prima	0761, 0817, 1749, 1785
Prism	0051
Proscan	0047, 0030, 2147, 2183, 2256
Proton	0178
Proview	1687
Pulsar	0017
Punktal	2687
Pyle	1200
Quasar	0250, 0051
RadioShack	0047, 0154, 0180, 0178, 0030
RCA	0047, 0051, 0093, 0060, 1661, 1958, 2403, 2434, 2746
Realistic	0154, 0180, 0178, 0030
Recco	0706
RevolutionHD	1623
Runco	0017, 0030, 1398
Sampo	1755, 0030
Samsung	0812, 0060, 0178, 0030, 0587, 0766
Sansei	0451
Sansui	0463, 0171, 1670, 1935, 1938
Sanyo	0054, 0154, 1362
Sceptre	0878, 1217, 1360, 1599, 2337

Scotch	0178
Scott	0236, 0180, 0178, 1711
Sears	0047, 0054, 0154, 0156, 0178, 0171
Semivox	0180
Semp	0156, 1743
Sense	1865
Sharp	0093
Sheng Chia	0093
Sherwood	1399
Signature	0054
Signet	1262
Skyworth	1799
Sole	1623
Sony	0000, 1685
Soundesign	0180, 0178
Soyo	1746, 1826
Space Tek	1696
Spectroniq	1687
Squareview	0171
SSS	0180
Starlite	0180
SunBrite	2337
Superscan	0093, 0864
Supreme	0000
SVA	0748, 0587, 0865, 1963
Sylvania	1864, 0054, 0030, 0171, 0587, 1314, 1665, 1963
Symphonic	0180, 0171
Syntax	1610, 1144, 1240
Tandy	0093
Tatung	1286, 1287, 1361, 1756
TCL	2403, 2434
Technics	0250, 0051
Techview	0847, 2004
Techwood	0051
Teknika	0054, 0180, 0150, 0060, 0092
TMK	0178
TNCI	0017
Tophouse	0180
Toshiba	0154, 0156, 0093, 0060, 0845, 1343, 1743, 1935
TruTech	1665, 1723, 2066
TVS	0463
US Logic	1286
Vector Research	0030
Venturer	1865
Victor	0053
Vidikron	0054, 1398
Vidtech	0178
Viewsonic	1755, 1564, 0797, 0857, 0864, 0885, 1330, 1365, 1578, 1627, 1742, 2014, 2087
Viore	1207, 1684, 2104, 2352
Vistron	2142
Vizio	1758, 0864, 0885, 1756
Wards	0000, 0047, 0054, 0017, 0154, 0156, 0051, 0180, 0060, 0178, 0030
Waycon	0156
Westinghouse	1712, 0451, 0885, 0890, 1217, 1282, 2499
White Westinghouse	0463, 1661
Wyse	1365
Yamaha	0030, 0797
Zenith	0000, 0047, 0017, 0463, 0178, 0030, 0145, 0092, 1661, 1365